


AT73047 50 PCs Brake Caliper Wing Tools

Contents and Applicable:

- 1, Right Rotating Caliper (with Right Side Thread)
- 1, Left Rotating Caliper (with Left Side Thread)
- 1, #0-Dsic For: Citroën
- 1, #1 For All Car
- 1, #11 For: Jaguar S Type
- 1, #12 For: BMW Mini
- 1, #5 13/32" Adaptor with 3/8" Dr. Inner 4 Point
- 1, #2 For: Citroen, Honda, Mercedes, Nissan, Peugeot, Rover, Toyota, VW
- 1, #3 For: Alfa Romeo, Audi, Austin, BMW, Ford, Honda, Jaguar, Mercedes-Benz, Mitsubishi, Nissan, Rover, Toyota, VW
- 1, #4 For: Alfa Romeo, Fiat, Ford, Mazada, Saab, Subaru, Honda
- 1, #6 For: Nissan, VW
- 1, #7 For: Audi, Ford, Honda, Nissan, Rover, Saab, Subaru, VW
- 1, #8 For: GM Motors
- 1, #9 For: GM Motors
- 1, #0 For: GM Motors
- 1, #M For: Nissan
- 1, #N For: Alfa Romeo, Audi, Ford, Lancia, VW
- 1, #Z For: BMW
- 1, #E For: Nissan
- 1, #G For: Fiat
- 1, #K For: Citroen
- 1, #K1 For: Citroen
- 1, #K2 For: Audi
- 1, #A For: Nissan, Opel, Vauxhall
- 1, #B For: Ford, Lincoln, Subaru
- 1, #C For: Nissan, Opel, Toyota
- 1, #D For: Citroen
- 1, #F For: Peugeot
- 1, #P For: Citroen
- 1, #J For: Alfa Romeo, Citroen, Fiat, Ford, Honda, Jaguar, Lancia, Nissan, Peugeot, Renault, Saab, Seat, Subaru, Volvo
- 1, #R For: Ford, Mazda, Mitsubishi, Toyota
- 1, #S For: Audi, BMW, Lancia, Proton, Renault Rover, VW
- 1, #T For: BMW, Rover
- 1, #V For: Rover
- 1, #Q For: Alfa Romeo, Ford, Honda, Rover, Subaru
- 1, #W For: Iveco, VW
- 1, #A1 For: Ford
- 1, #B1 For: Ford
- 1, #F1 For: Fiat
- 1, #H12 For: Ford
- 1, #T45 For: Ford
- 1, #P1 For: Peugeot
- 2, Hex Key Wrench:
 - H6 and H7 For: BMW
- 2, Pin Ø 3.0mm and Ø 5.5mm
- 1, 100g Grease
- 3, Pentagon socket, Size: 10, 14, 19 mm

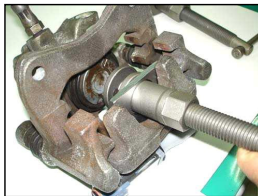

AT73049 27 PCs BRAKE PISTON WIND-BACK SERVICE KIT

Applicable:

Suitable for Push - Back and Wind - Back Brake Pistons.

Included Left and Right Handed Thrust Bolt Assemblies.

Left - Handed Thrust Bolt Required for FORD, CITROEN and RENAULT Applications precision made Adaptor Plates with Thrust Bolt Assemblies and Reaction Plates.

Contents:

- 1, Right - Handed Thrust Bolt Assy'
- 1, Left - Handed Thrust Bolt Assy'
- 1, Adaptor
- 1, #1: ALFA ROMEO, AUDI, BMW, CITROEN, FLAT, FORD, HONDA, JAGUAR, LANCIA, LINCOLN, MAZDA, MITSUBISHI, NISSAN, OPEL, PEUGEOT, RENAULT, ROVER, SAAB, SEAT, SUBARU, TOYOTA, OPEL, VW, VOLVO, PROTON
- 1, #2: BMW
- 1, #3: JAGUAR
- 1, #4: AUDI
- 1, #5: ALFA ROMEO, AUDI, CITROEN, FLAT, FORD, HONDA, JAGUAR, LANCIA, NISSAN, PEUGEOT, RENAULT, ROVER, SAAB, TOYOTA, VW, VOLVO
- 1, #8: JAGUAR, OPEL
- 1, #9: FORD
- 1, #10: CITROEN
- 1, #11: CITROEN, HONDA
- 1, #12: AUDI, BMW, LANCIA, PROTON, RENAULT, VW
- 1, #13: NISSAN, OPEL, VAUXHALL
- 1, #14: FORD, MITSUBISHI
- 1, #15: ALFA ROMEO, FLAT, FORD, HONDA, ROVER, SAAB
- 1, #16: PEUGEOT, RENAULT
- 1, #17: NISSAN
- 1, #18: FLAT
- 1, #19: RENAULT
- 1, #20: BMW
- 1, #21: AUDI, BMW, CITROEN, FORD, HONDA, JAGUAR, MITSUBISHI, NISSAN, PEUGEOT, RENAULT, ROVER, TOYOTA, VOLVO
- 1, #22: CITROEN
- 1, #23: CITROEN
- 1, #A: Almost All Vehicles
- 1, #B: FLAT, FORD, HONDA, JAGUAR, LANCIA, LINCOLN, MITSUBISHI, OPEL, PEUGEOT, RENAULT.

**AT73029 Brake Spring Washer Tool**

Applicable:

Remove and Install Range:

Ø 5/8" ~ Ø 21/32" (Dia. 16mm ~ Dia. 16.6mm)

With Black Handle

**AT73037 Brake Spring Washer Tool**

Applicable:

Measures clearance between Brake Drums and Shoes with Diameters from 6-1/2" to 14-1/4" (165 to 362 mm).

Works on most of small cars with Drum Brakes Prior to assembly.

Inside Calipers measure Drum Diameter.

Outside Calipers transfer measurement to Brake Shoes.

Calibrated in Inches and Mini-Meters.

